



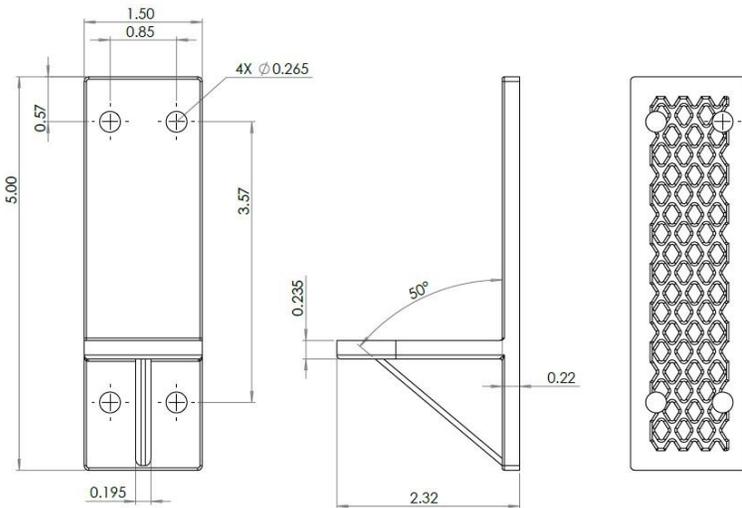

# Product Data Sheet

## Sno-Safe ORIGINAL Snow Guard

See our installation videos on our website <https://sno-safe.com>

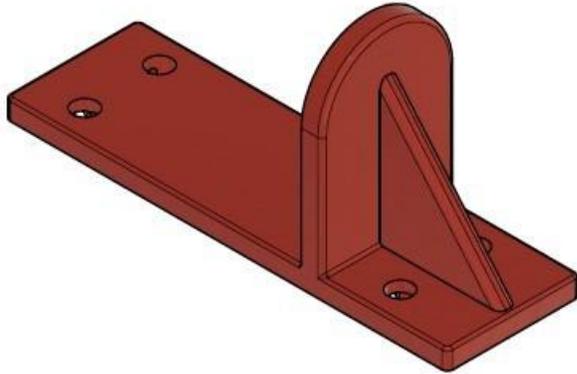

Colors: Available in Clear and Custom colors

Fastening methods are:  
 1. Surebond SB-190 Adhesive  
 2. Mechanical Fastening with Self Tapping Sheetmetal Screws using (4) provided holes

### Manufacturers Contact:

Sno-Safe Snow Guards LLC  
 PO Box 541  
 Chicopee, MA 01021  
 Phone: 413-592-0404  
 Email: [info@sno-safe.com](mailto:info@sno-safe.com)

### Colors:

Available in Clear and Standard Colors

### Fastening Methods:

1. Surebond SB-190 Adhesive
2. Mechanical Fastening with Self Tapping Roofing Screws using provided holes
3. Lucas #6600 Adhesive w / TPO primer for TPO Roofs

### Use on:

Metal, Rubber, TPO, PVC, Glass

### Installation:

- Adhesive Only or Adhesive & Screws
- Square Channel Grooves increase adhesive strength

### Strength:

Gusseted & thick wall design for maximum strength

### Lasting:

UV inhibitor prevents discoloration & Degradation from sunlight

Request for manufacturers Layout/Spacing at:  
<https://sno-safe.com/spacing.html>

<b>Material:</b>	UV Resistant Polycarbonate
<b>Manufacturing method:</b>	Injection Molding
<b>Shear Load Testing:</b>	1220 lbs., Adhesive Only      2280 lbs., Adhesive & Screws
<b>Installation Process:</b>	See installation instructions
<b>SureBond strength vs. cure time (approx.)</b>	20% @ 2 weeks, 35% @ 4 weeks, 60% @ 6 weeks, Full cure @ 12 weeks
<b>Suggested Layout/Spacing</b>	Roof dependent. See calculator @ <a href="https://sno-safe.com/spacing.html">https://sno-safe.com/spacing.html</a>